 


01-H0001 24V 45A 8Groove



Reference No.:		Application and Description
Voltag		DONGFENG TRUCK
Dongfeng:	3701V66	

01-H0002 24V 30A 1Groove



Reference No.:		Application and Description
Voltag	ALM1427	MITSUBISHI: Canter 35,60; Fuso FA,FB
Bosch	0986080160	
Cargo	112210	
HC-Parts	JA1427IR	
Mitsubi.	A2T71983	
WAI	12551	
AS-PL	A5278	

01-H0003 24V 100A 10Groove



Reference No.:		Application and Description
Voltag	ALM3691	Regulator:VR-H2009-183B
Scania	1884268	
Cargo	114382	
Delco	19091007	
Mitsubi.	A004TR5491	
Prestolite	861298	
WPS	20290N	

01-H0004 12V 65A 2Groove



Reference No.:		Application and Description
Voltag	ALM1179	MITSUBISHI: L 300
Bosch	0986081740	
Cargo	111872	
HC-Parts	JA1179IR	
Mitsubi.	A2TN0399	
WAI	12664N	

01-H0005 12V 70A 3Groove



Reference No.:		Application and Description
Voltag	ALV0711	VOLVO
Bosch	0120488143	
Cargo	111403, 113839	
HC-PARTS:	CA7111R	
Lucas	LRA953	
Volvo	3417315	
WAI	20958N	

01-H0006 V A Groove



Reference No.:		Application and Description
Voltag	ALH1521	

01-H0007

24V 80A 8Groove CW

01-H0008

24V 90A 7Groove



Reference No.:		Application and Description
Voltag	ALB2207	BENZ
Bosch	0124555011	Atron,Axor
Bosch	F000BL07H5	
M-Benz	0131545002	
M-Benz	A0131545002	



Reference No.:		Application and Description
Voltag	ALB5091	

01-H0009

24V 80A 7Groove

01-H00

V A Groove

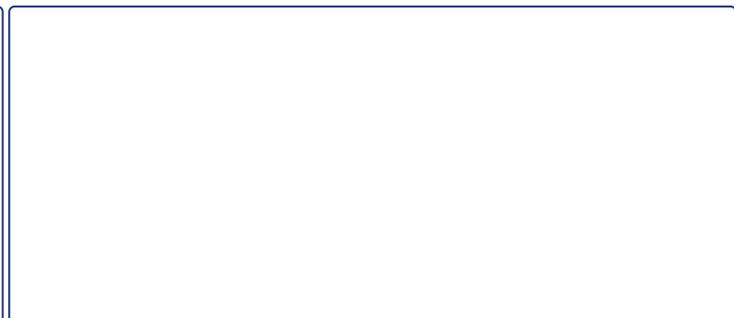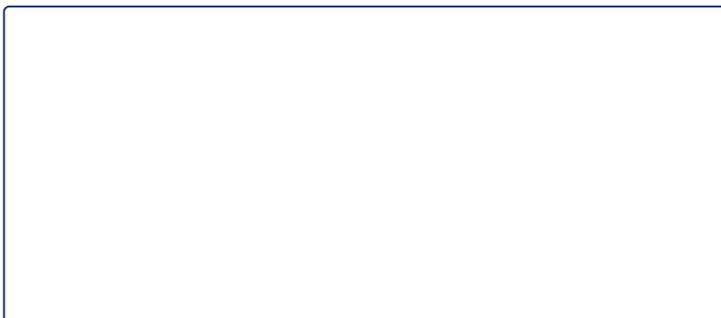

Reference No.:		Application and Description
Voltag		
Bosch	0124555063	



Reference No.:		Application and Description
Voltag		

01-H00

V A Groove

01-H00

V A Groove

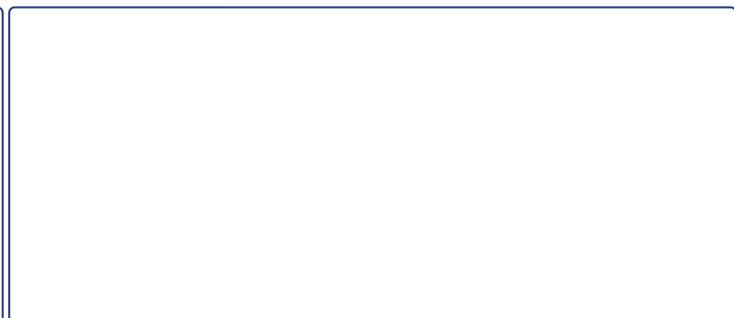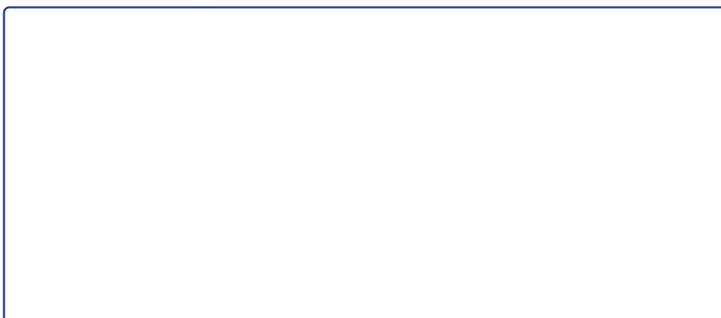

Reference No.:		Application and Description
Voltag		

Reference No.:		Application and Description
Voltag		

01-H00	V	A	Groove	01-H00	V	A	Groove
---------------	----------	----------	---------------	---------------	----------	----------	---------------

Reference No.:	Application and Description
Voltag	

Reference No.:	Application and Description
Voltag	

01-H00	V	A	Groove	01-H00	V	A	Groove
---------------	----------	----------	---------------	---------------	----------	----------	---------------

Reference No.:	Application and Description
Voltag	

Reference No.:	Application and Description
Voltag	

01-H00	V	A	Groove	01-H00	V	A	Groove
---------------	----------	----------	---------------	---------------	----------	----------	---------------

Reference No.:	Application and Description
Voltag	

Reference No.:	Application and Description
Voltag	

01-H00	V	A	Groove	01-H00	V	A	Groove
---------------	----------	----------	---------------	---------------	----------	----------	---------------

Reference No.:	Application and Description
Voltag	

Reference No.:	Application and Description
Voltag	

01-H00	V	A	Groove
---------------	----------	----------	---------------

Reference No.:	Application and Description
Voltag	

01-H00	V	A	Groove
---------------	----------	----------	---------------

Reference No.:	Application and Description
Voltag	

01-H00	V	A	Groove
---------------	----------	----------	---------------

Reference No.:	Application and Description
Voltag	

01-H00	V	A	Groove
---------------	----------	----------	---------------

Reference No.:	Application and Description
Voltag	

01-H00	V	A	Groove	01-H00	V	A	Groove
---------------	----------	----------	---------------	---------------	----------	----------	---------------

Reference No.:		Application and Description		Reference No.:		Application and Description	
Voltag				Voltag			

01-H00	V	A	Groove	01-H00	V	A	Groove
---------------	----------	----------	---------------	---------------	----------	----------	---------------

Reference No.:		Application and Description		Reference No.:		Application and Description	
Voltag				Voltag			

01-H00	V	A	Groove	01-H00	V	A	Groove
---------------	----------	----------	---------------	---------------	----------	----------	---------------

Reference No.:		Application and Description		Reference No.:		Application and Description	
Voltag				Voltag			